

⚠ IMPORTANT: THESE INSTRUCTIONS SHOULD BE READ CAREFULLY AND RETAINED FOR FUTURE REFERENCE.

IMPORTANT INSTRUCTIONS

WARNING: KEEP BATTERIES OUT OF REACH OF CHILDREN BATTERY HANDLING

- Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous.
- Do not recharge, short-circuit, or mix old and new batteries.
- Follow local regulations for recycling batteries and electrical products.

CAUTION: No obvious symptoms

Unfortunately, it is not obvious when a button or coin battery is stuck in a child's oesophagus (food pipe).

There are no specific symptoms associated with this. The child might:

- cough, gag or drool a lot;
- appear to have a stomach upset or a virus;
- be sick;
- point to their throat or stomach;
- have a pain in their abdomen, chest or throat;
- be tired or lethargic;
- be quieter or more clingy than usual or otherwise "not themselves";
- lose their appetite or have a reduced appetite; and
- not want to eat solid food/be unable to eat solid food.

These sorts of symptoms vary or fluctuate, with the pain increasing and then subsiding.

A specific symptom to button and coin battery ingestion is vomiting fresh (bright red) blood. If the child does this seek immediate medical help.

The lack of clear symptoms is why it is important to be vigilant with "flat" or spare button or coin batteries in the home and the products that contain them.

⚠ BATTERY WARNING

KEEP OUT OF REACH OF CHILDREN

Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. If swallowed or it is suspected that they may have been swallowed, seek medical attention immediately.


If the battery compartment on the remote control is damaged or does not close securely, stop using it immediately and store it away from children.

DESCRIPTION

The Remote accessory allows you to manage one or more compatible devices simultaneously.

Once connected, it enables unified control of all linked devices, letting you adjust settings, and activate Preset modes easily. It simplifies multi-appliance operation and helps maintain consistent comfort within your space.

Remove the plastic strip from the remote control and point towards the right side of the heater.

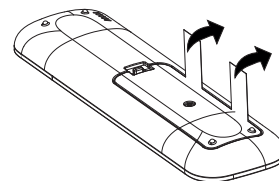

REMOTE PAIRING

To pair the remote, ensure the appliance is advertising for connection, (see appliance instructions). Press and hold the PAIR button  on the remote longer than 5 seconds. The remote will scan for an appliance, once detected the appliance will emit a series of audible beeps. If it is the correct appliance, press and hold the PAIR button  longer than 5 seconds to verify, the appliance LED will flash red and green whilst emitting a series of beeps. When complete the appliance will beep to confirm bonding, and the beeping will discontinue. The appliance is then considered bonded with the remote.

If there are more than one appliance within range and the initial appliance being communicated with is not the intended device then connection can be rejected by a quick press of the PAIR button . The remote will rescan and initiate pairing with the next available device.

Repeat the process until the correct appliance has been paired.

 **NOTE:** It is possible to bond up to four appliances to the same remote. Each subsequent appliance shall replace the oldest paired appliance.

Your Guarantee

Your product is manufactured by Glen Dimplex UK operating as Dimplex and comes with a 1 year guarantee.

To view the full guarantee terms and conditions scan this QR code using your smartphone or go to <https://www.gdhv.com/legal/en-gb/guarantee-terms-conditions>.

Outside the UK

Warranty / Guarantee: Contact your local Dimplex distributor for details.

Technical advice and service: Contact your local Dimplex distributor.



gdhv.customersupport
@glendimplex.co.uk
www.dimplex.co.uk

Dimplex,
Millbrook House,
Grange Drive, Hedge End,
Southampton, SO30 2DF

Glen Dimplex Europe,
Airport Road, Cloghran,
Co. Dublin K67 VE08



Important: For electrical products sold within the European Community. At the end of the electrical products useful life it should not be disposed of with household waste. Please recycle where facilities exist. Check with a Local Authority or retailer for recycling advice in your country. Batteries should be disposed of or recycled in accordance with WEEE Directive 2012/19/EU. Packaging should be recycled where possible.



© Glen Dimplex. All rights reserved. Material contained in this publication may not be reproduced in whole or in part, without prior permission in writing of Glen Dimplex.

OPERATION

Once the remote is bonded with one or more appliances it is possible to control them remotely. The remote control offers a range of functionality, the function of each button will vary depending on the setting of the rocker switches on the appliance. These functions are summarised in Table 1.

Functionality Across Multiple Heaters

The remote can pair with up to four heaters. When a button is pressed on the remote, the same command is broadcast to all paired and powered on heaters within range.

For instance, if Heater 1 is in Manual mode and Heater 2 is in Schedule (Auto) mode, the same remote button press will trigger the corresponding function on each heater based on its current mode.

The heaters will operate independently based on the rocker switch/mode settings — the remote will not override the physical mode selection.

For consistent operation across all connected heaters, ensure rocker switches have the same mode selected.

Note: The remote cannot set the time, change schedules, or adjust temperature setpoints. These settings must be configured using the ConfigR app. For detailed instructions, refer to the appliance manual.

Remote Button	Appliance Mode	Function	EN
	Standby	No Function	
	Schedule (Auto)	If Comfort ON , no function. If Comfort OFF , enables the Boost and turns Comfort ON for the configured time set in the ConfigR app or until the next Comfort ON period becomes active.	
	Manual/Continuous	The appliance will run indefinitely to maintain a pre-set room temperature or, until the user makes a change.	
	Standby	No Function	
	Schedule (Auto)	Switches to Comfort OFF until next Comfort ON period becomes active. Advance and Boost functions disabled.	
	Manual/Continuous	Switches to Comfort OFF	
1 Preset 1	Schedule (Auto) / Manual/Continuous	This will activate the appropriate Setpoint temperature associated with each Preset configured via the ConfigR app.	
2 Preset 2			
	Standby	No Function	
	Schedule (Auto) / Manual/Continuous	Request pairing to appliance via the ConfigR app. When paired the appliance will beep. Hold for longer than 5 seconds to confirm pairing and to complete the process.	
	Standby	No Function	
	Schedule (Auto)	If Comfort is currently Comfort OFF , advance to end of next timer profile. If Comfort is currently Comfort ON , button has no function.	
	Manual/Continuous	No Function.	Table 1

MAINTENANCE

Battery Replacement

1. Remove the battery cover using a Philips screwdriver.
2. Install two 3 Volt CR2032 batteries into the battery holder with the + side facing up.
3. Reattach the battery cover and secure it with the screw you removed earlier.



Battery must be recycled or disposed of properly. Check with your Local Authority or Retailer for recycling advice in your area.

